


Serpentine

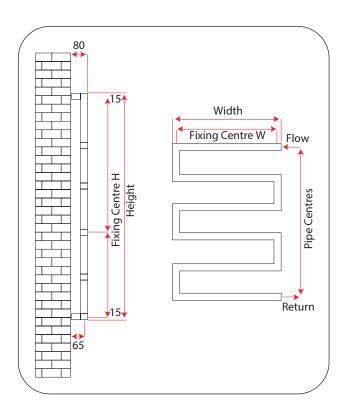


- All the dimensions are shown in millimetres
- Tube dia 30mm x 30mm
- 1/2 inch BSP lateral same side connections
- Test pressure: 10 Bar
- Max working temperature: 8 Bar
- Heat output in accordance with EN 442

Please Note:

- Please allow minimum of 100mm for valves
- The flow and return can be reversed

Serpentine	Water Content (L)	Weight (KG)	Pipe Centres +/- 2mm	Fixing Centres (H) +/- 2mm	Fixing Centres (W) +/- 2mm	Height (mm)	Width (mm)
RXSP-0730500	2.9	5.4	700	435-280	500	730	500
RXSP-1010500	3.8	6.9	980	435-560	500	1010	500
RXSP-1570500	5.0	9.3	1540	715-840	500	1570	500

Installation:

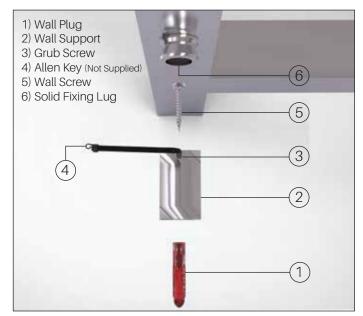

Step 1: Select the desired mounting position, make sure the wall is adequate to take the fixing points of the rail i.e anchor points must be securely attached to a stud or masonry.

Step 2: Loosely screw the wall support (Part 2) into the wall using the wall screw (5) and washer. Use wall plug (1) if you are fixing into masonry. Do no tighten fully.

Step 3: Manoeuvre the rail back onto the bracket and tighten with the grub screw (3).

Cleaning:

- Do not use any abrasive or chemical cleaners to clean the radiators as this will cause damage to the surface finish. Please use warm water and a damp cloth.
- Do not clean when hot.